




045000431

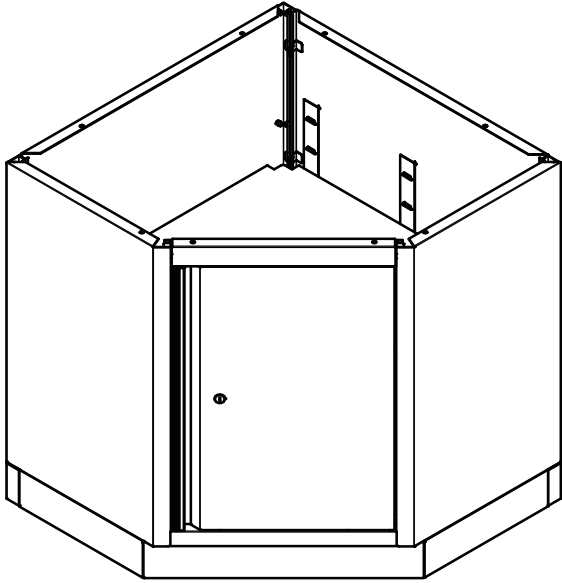


045000421

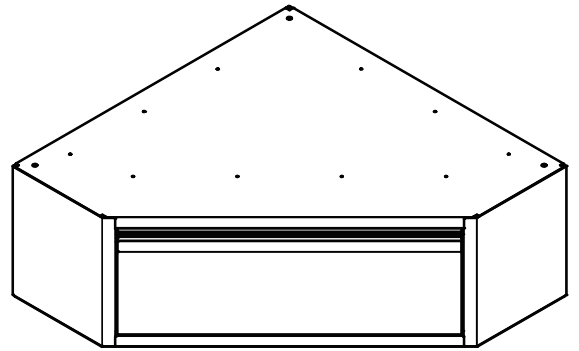


045000426

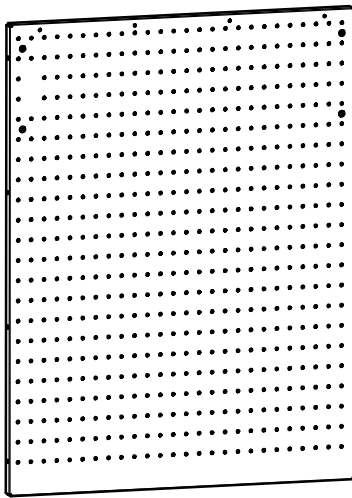


045000440 X
045000445 W

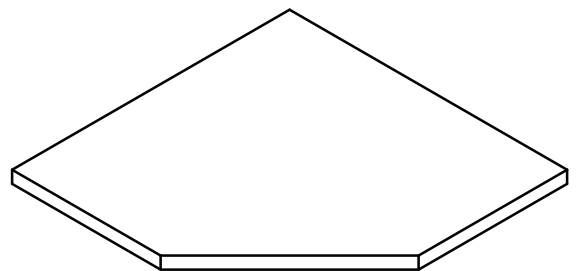

045000366




045000333



ISTRUZIONI DI MONTAGGIO


ASSEMBLY INSTRUCTIONS

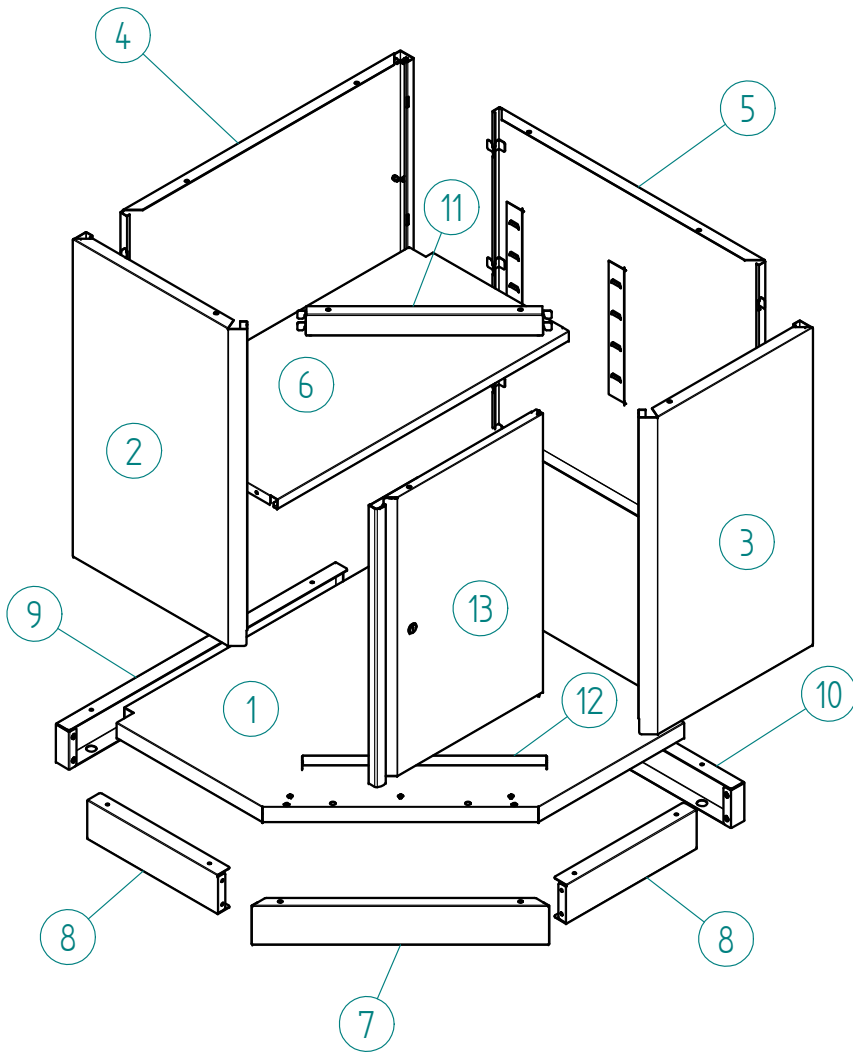

NO.	DESCRIZIONE DESCRIPTION	QTY.
A	Viti Screws ST6×12	21+1
B	Bulloni Bolts M6×12	16





A









B



STEP 1

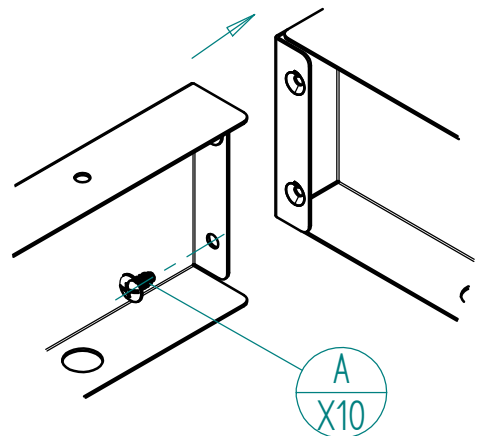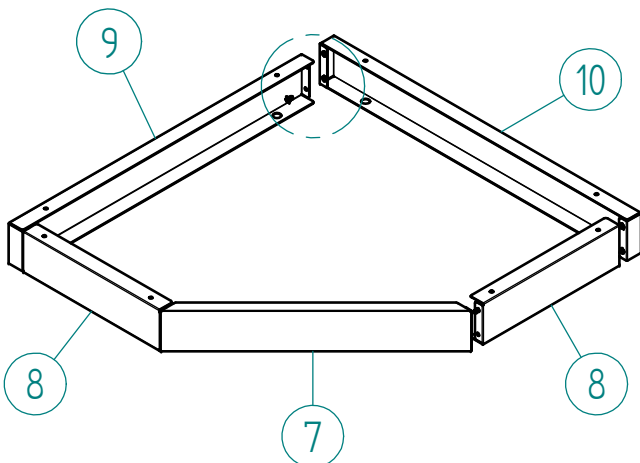



STEP 2

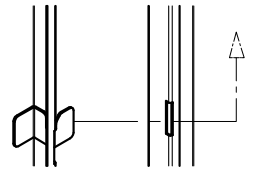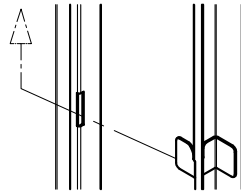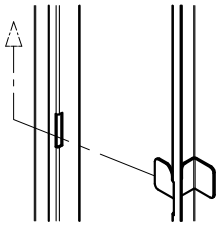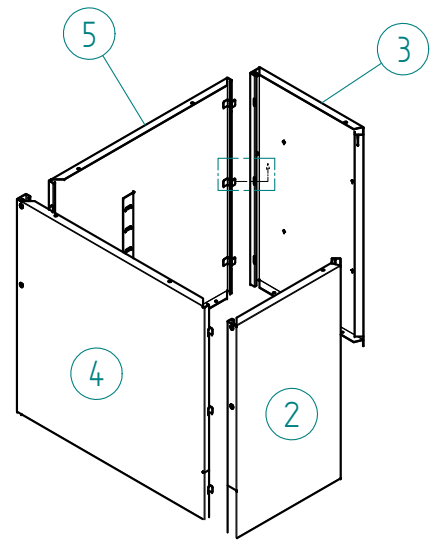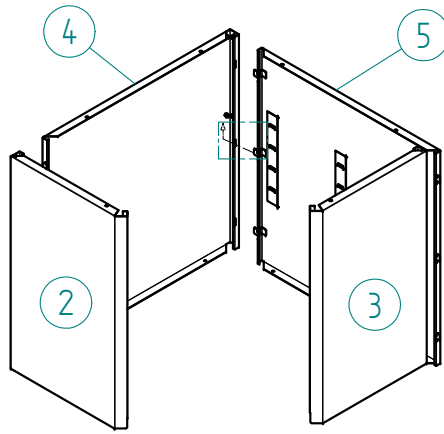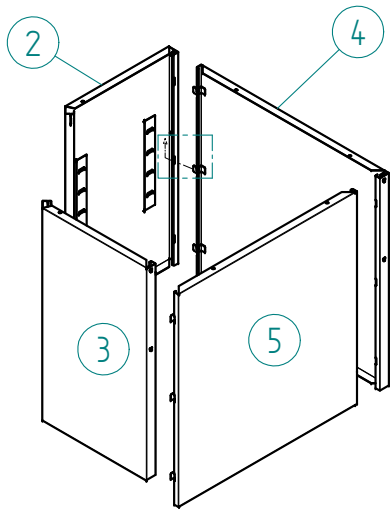



STEP 3

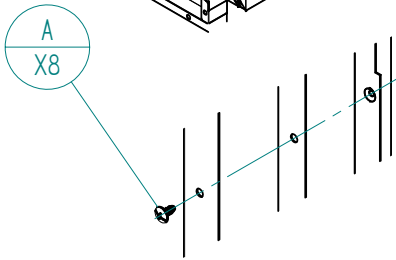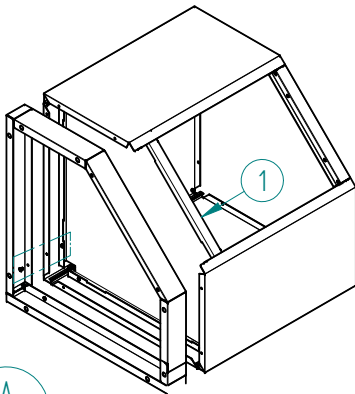



STEP 4

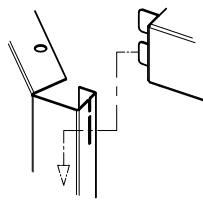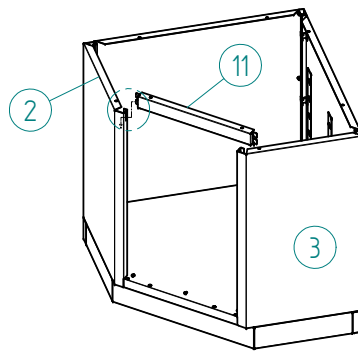



STEP 5

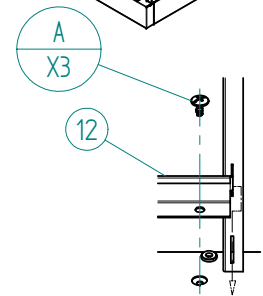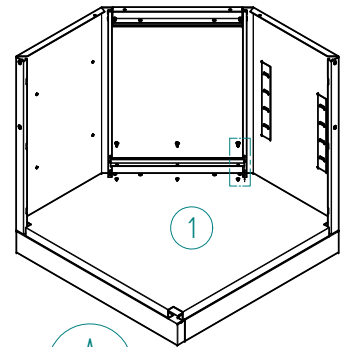


STEP 6

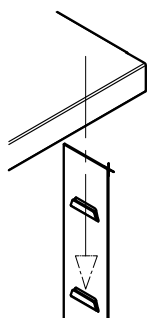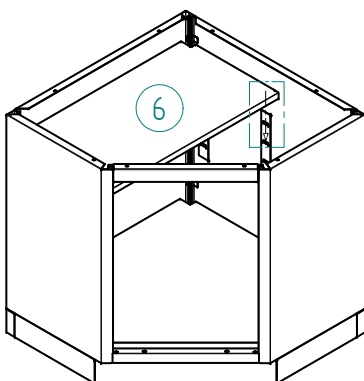


STEP 7

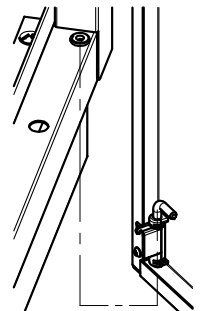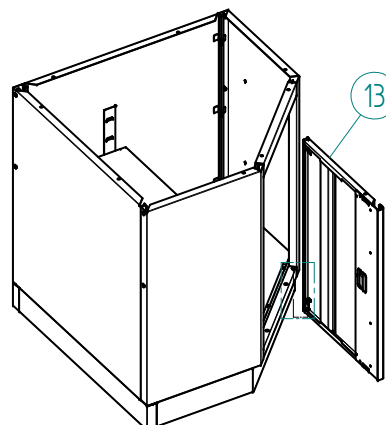


STEP 8

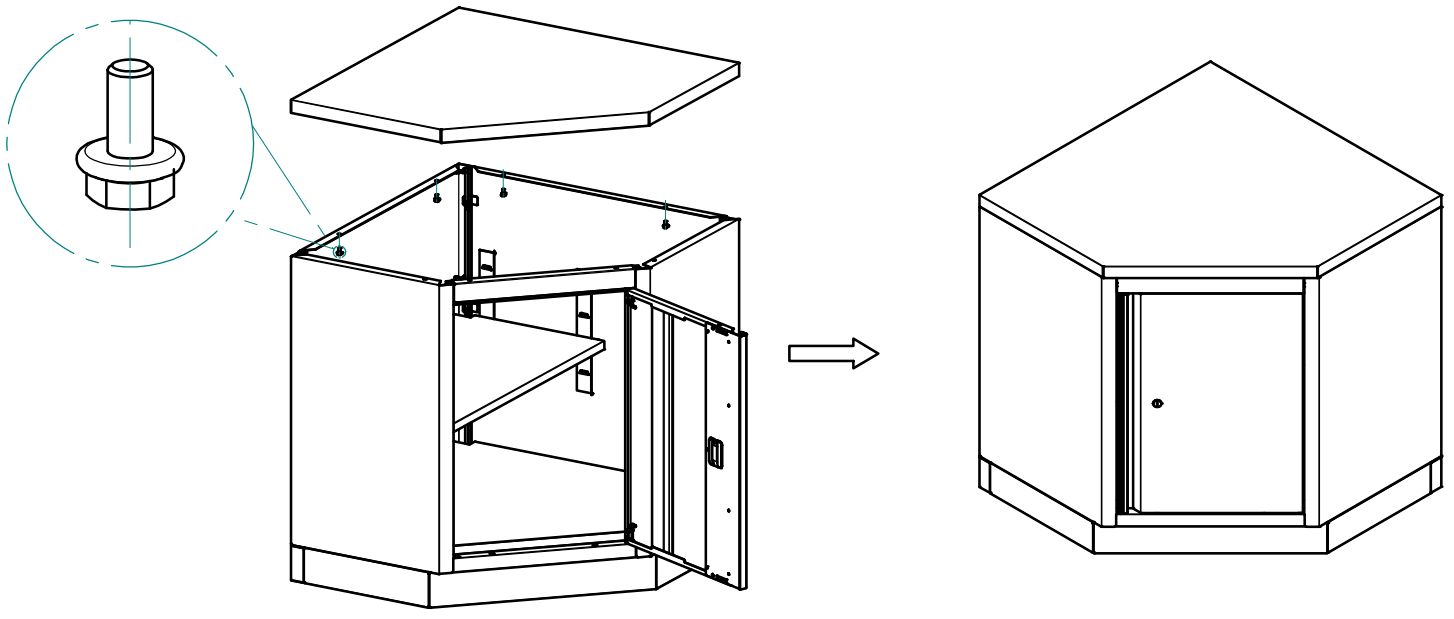





STEP 9

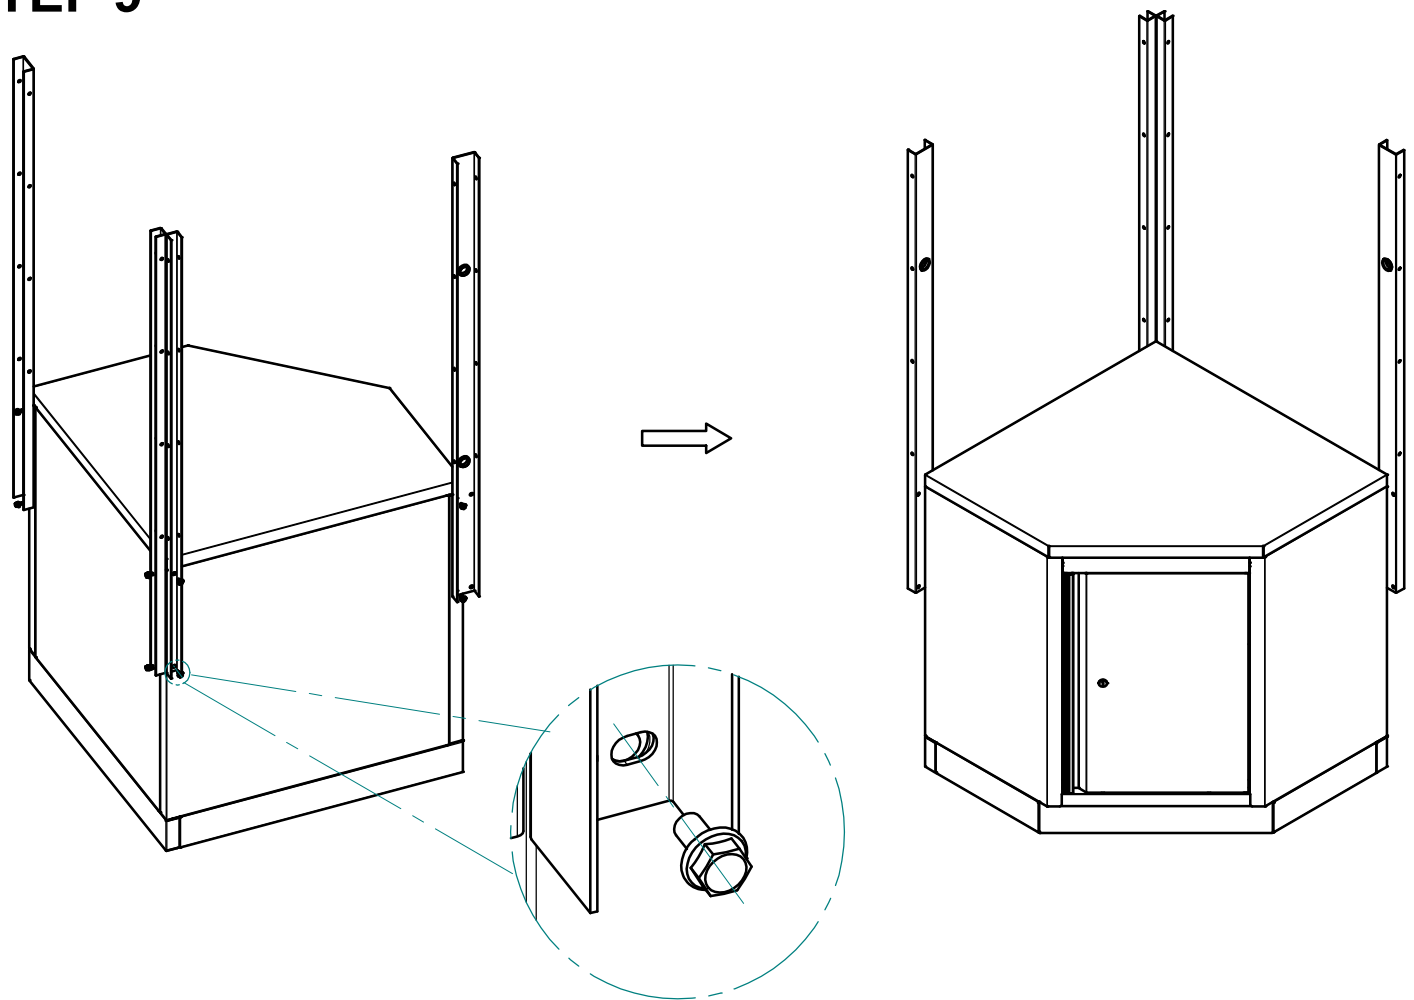




STEP 10

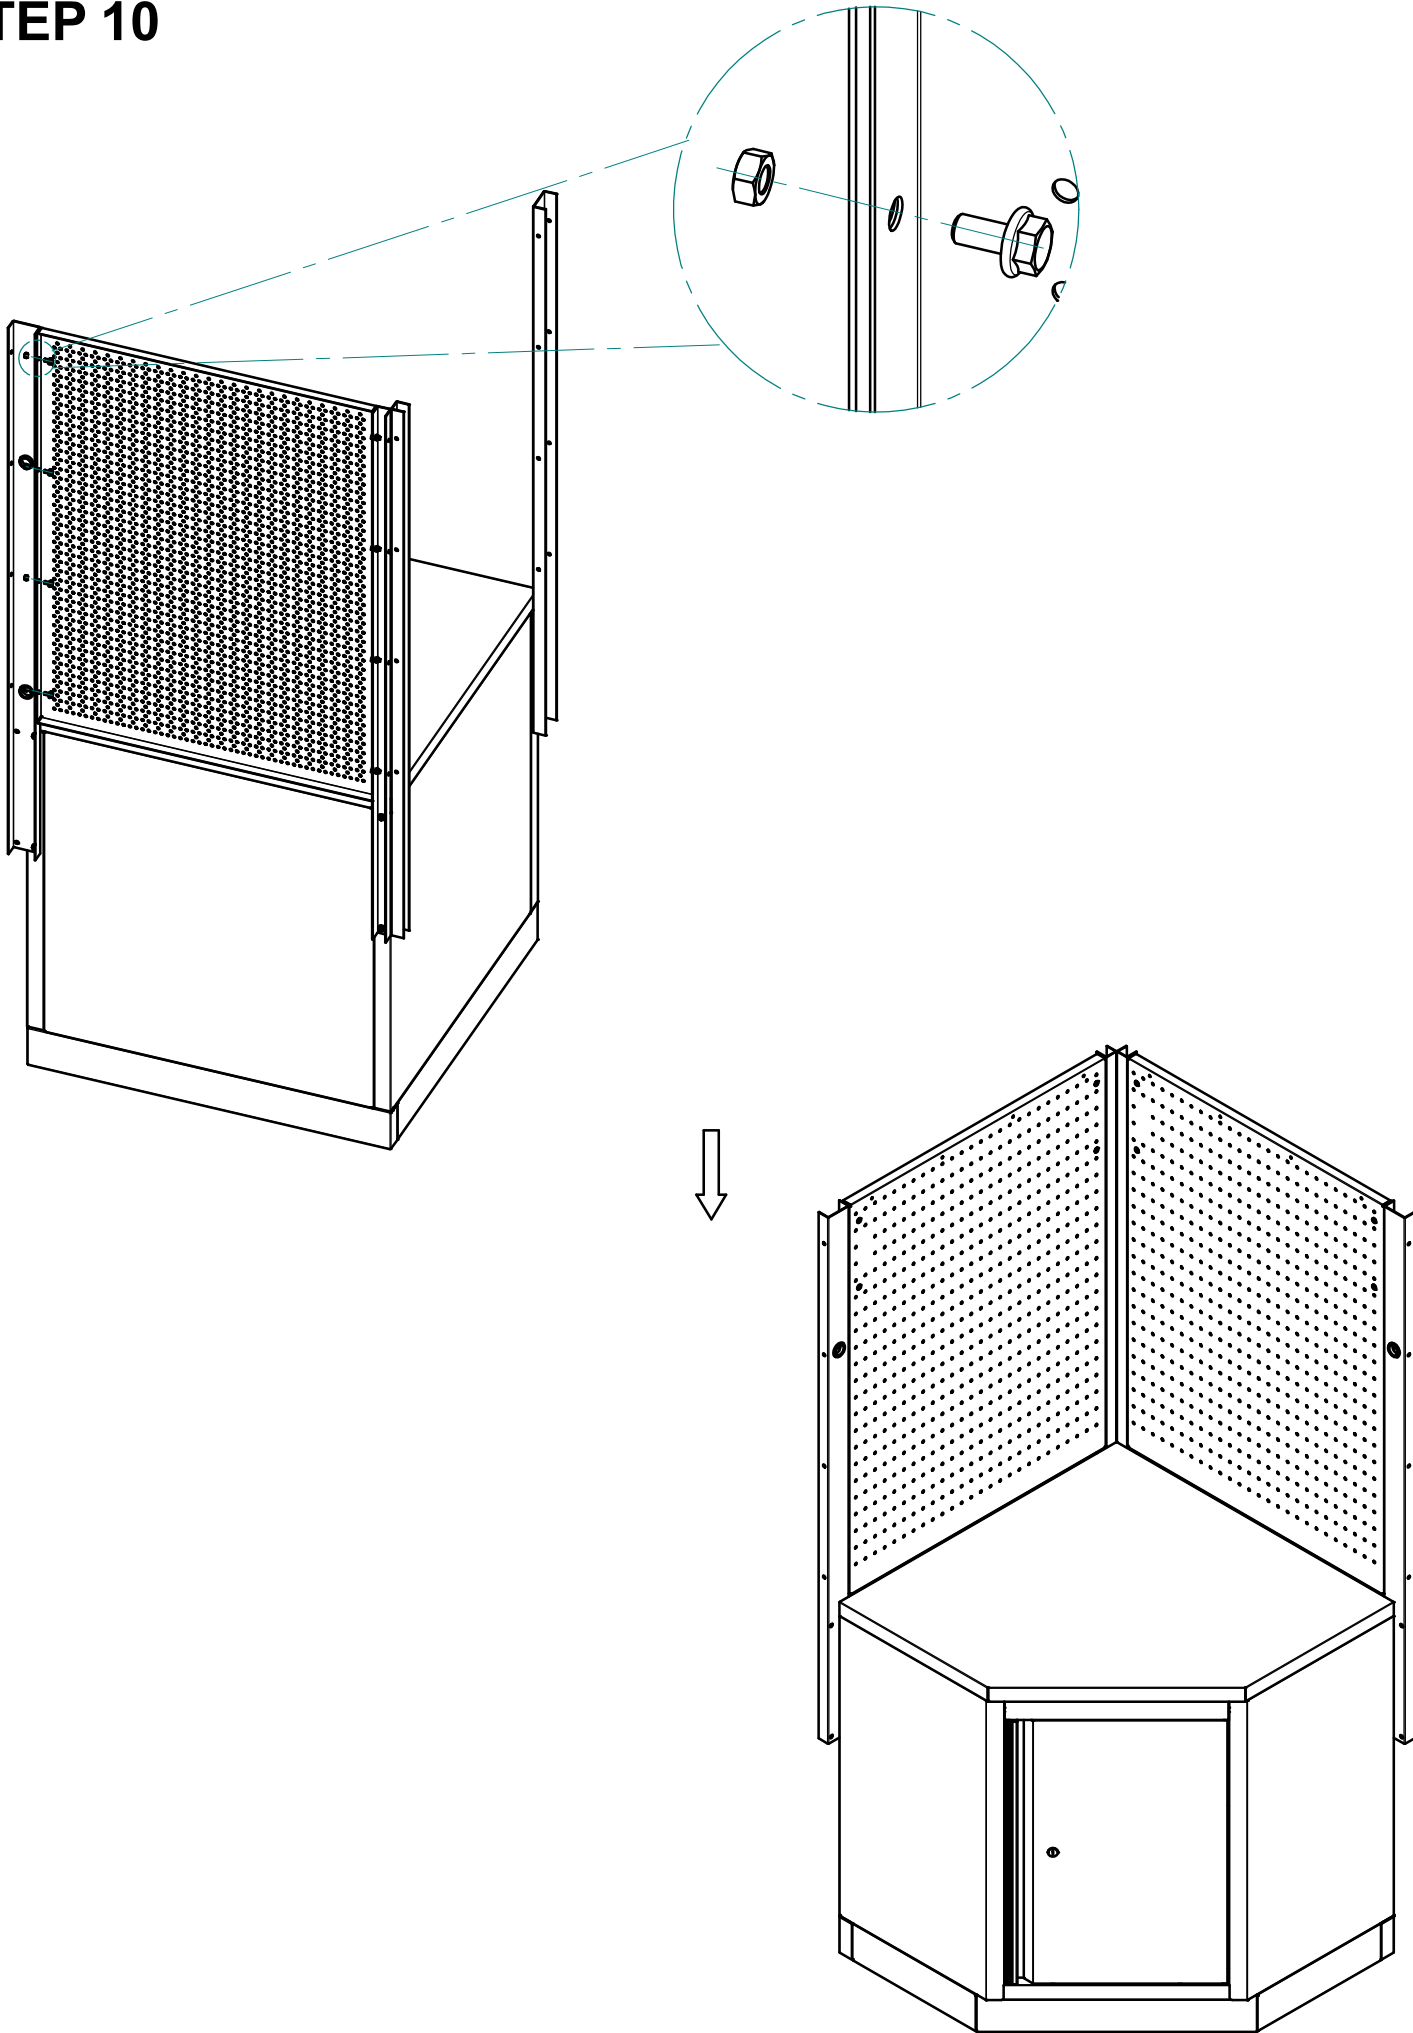

STEP 11

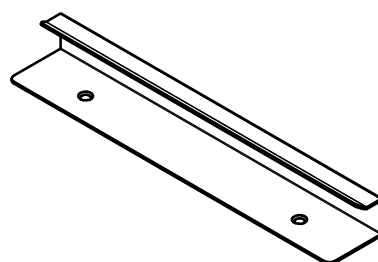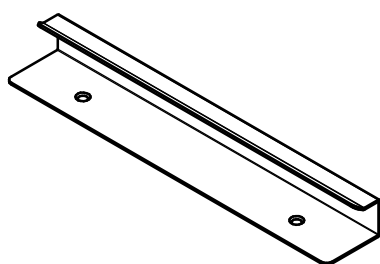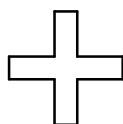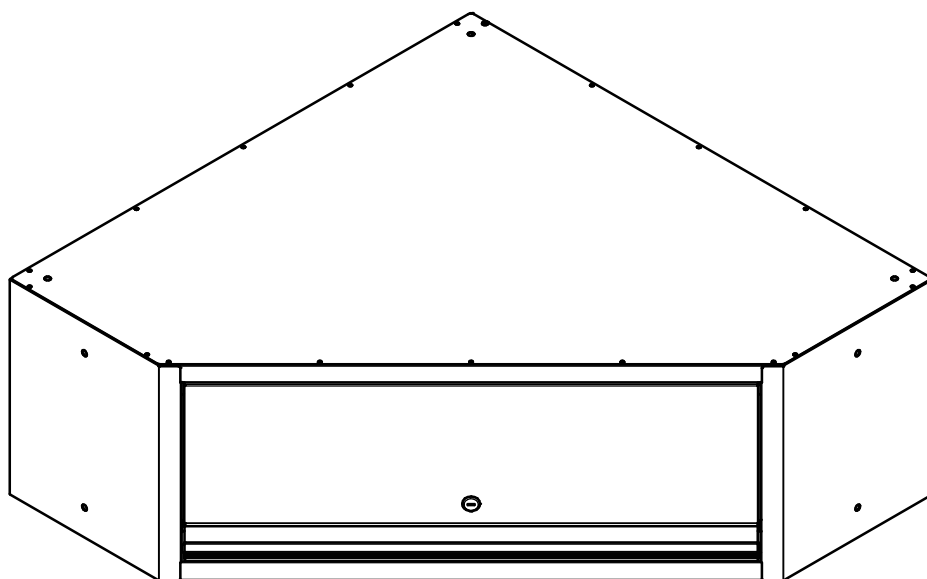

STEP 12

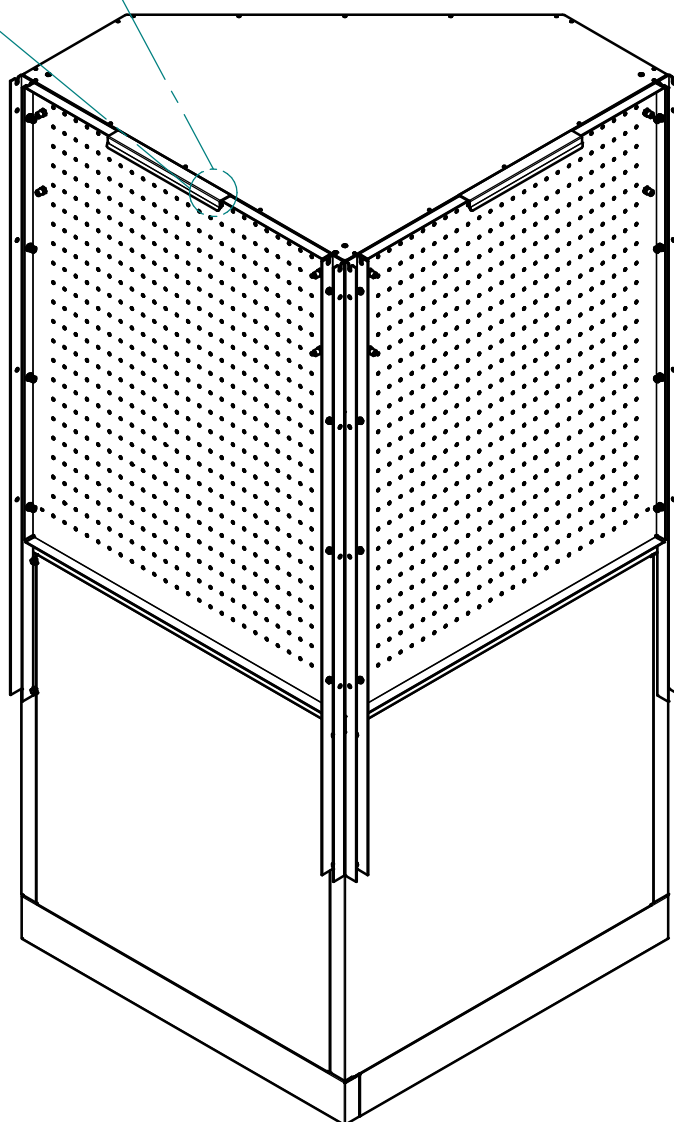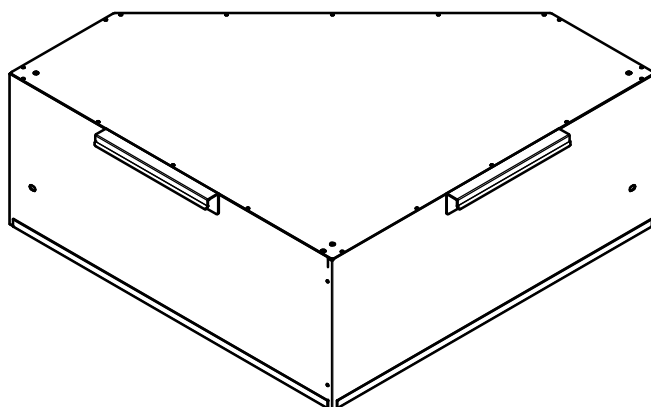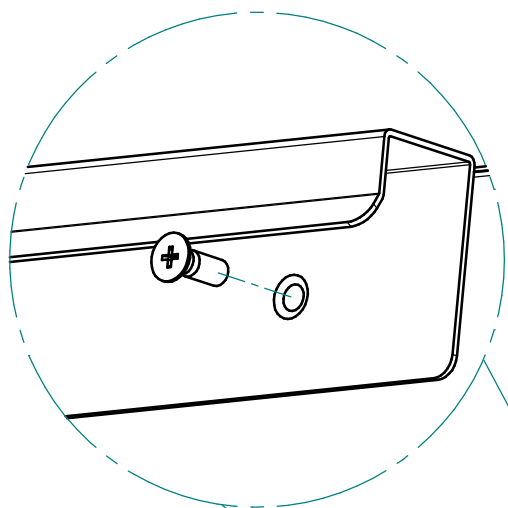

STEP 13

